















<p>H094LM</p> <p>21812-28250</p> <p>TIBURON</p> <p>Front Engine Bushing (RH,M/T)</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H094LMZ</p> <p>21810-29100</p> <p>TIBURON</p> <p>Insulator Engine (RH,M/T)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">Under Develop</div>
<p>H094LM</p> <p>21812-28250</p> <p>TIBURON</p> <p>Front Engine Bushing (RH,M/T)</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H09E92LZ</p> <p>21810-28250</p> <p>ELANTRA'92 1.6,1.8</p> <p>Insulator Engine (LH,M/T)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">Under Develop</div>
<p>H094LM</p> <p>21812-28250</p> <p>TIBURON</p> <p>Front Engine Bushing (RH,M/T)</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H09E94LZ</p> <p>21810-28270</p> <p>ELANTRA '94 1.6,1.8</p> <p>Insulator Engine (LH,M/T)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">Under Develop</div>
<p>H09A00R</p> <p>21834-22030</p> <p>ACCENT</p> <p>Front Engine Bushing (RH)</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H09A00RZ</p> <p>21810-22040</p> <p>ACCENT</p> <p>Insulator Engine (RH)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">Under Develop</div>
<p>H09A00E</p> <p>21850-22702</p> <p>ACCENT'96</p> <p>Front Engine Bushing (RH)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09A00EZ</p> <p>21850-22702</p> <p>ACCENT'96</p> <p>Insulator Engine (RH)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">Under Develop</div>
<p>H09A97E</p> <p>21851-24700</p> <p>ACCENT'97, EXCEL, SCOUPE</p> <p>Front Engine Bushing (RE)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09A97EZ</p> <p>21850-22300</p> <p>ACCENT'97</p> <p>Insulator Engine (RE)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">Under Develop</div>
<p>H09A97E</p> <p>21851-24700</p> <p>ACCENT'97, EXCEL, SCOUPE</p> <p>Front Engine Bushing (RE)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09X92EZ</p> <p>21850-24710</p> <p>EXCEL</p> <p>Insulator Engine (RE,A/T)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">Under Develop</div>
<p>H09A97E</p> <p>21851-24700</p> <p>ACCENT'97, EXCEL, SCOUPE</p> <p>Front Engine Bushing (RE)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09C00EZ</p> <p>21850-23900</p> <p>SCOUPE</p> <p>Insulator Engine (RE,A/T)</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">Under Develop</div>

<p>H09A97E</p> <p>21851-24700</p> <p>ACCENT'97, EXCEL, SCOUPE</p> <p>Front Engine Bushing (RE)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09E96EZ</p> <p>21930-29051</p> <p>ELANTRA'96 ,TIBURON</p> <p>Insulator Engine (RE,A/T)</p> <p>Under Develop</p>
<p>H09A97E</p> <p>21851-24700</p> <p>ACCENT'97, EXCEL, SCOUPE</p> <p>Front Engine Bushing (RE)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09E94EZ</p> <p>21930-28500</p> <p>ELANTRA'92,96 1.6,1.8</p> <p>Insulator Engine (RE,A/T)</p> <p>Under Develop</p>
<p>H09A97FA</p> <p>21911-22400 , 21911-28500</p> <p>ACCENT'97, ELANTRA'97</p> <p>Front Engine Bushing (FR,A/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09A97FZ</p> <p>21840-22400</p> <p>ACCENT'97</p> <p>Insulator Engine (FR,A/T)</p> <p>Under Develop</p>
<p>H09A97FA</p> <p>21911-22400 , 21911-28500</p> <p>ACCENT'97, ELANTRA'97</p> <p>Front Engine Bushing (FR,A/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09E96FAZ</p> <p>21910-29051</p> <p>ELANTRA'96</p> <p>Insulator Engine (FR,A/T)</p> <p>Under Develop</p>
<p>H09A97FM</p> <p>21911-22001, 23000, 28000</p> <p>ACCENT'97 ,TIBURON</p> <p>Front Engine Bushing (FR,M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09A96FMZ</p> <p>21840-22000</p> <p>ACCENT'96 ,TIBURON</p> <p>Insulator Engine (FR,M/T)</p> <p>Under Develop</p>
<p>H09A97FM</p> <p>21911-22001, 23000, 28000</p> <p>ACCENT'97 ,TIBURON</p> <p>Front Engine Bushing (FR,M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09A97FMZ</p> <p>21840-22300</p> <p>ACCENT'97 ,TIBURON</p> <p>Insulator Engine (FR,M/T)</p> <p>Under Develop</p>
<p>H09A97FM</p> <p>21911-22001, 23000, 28000</p> <p>ACCENT'97 ,TIBURON</p> <p>Front Engine Bushing (FR,M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09A97FZ</p> <p>21910-29001</p> <p>TIBURON</p> <p>Insulator Engine (FR,M/T)</p> <p>Under Develop</p>
<p>H09A97FM</p> <p>21911-22001, 23000, 28000</p> <p>ACCENT'97 ,TIBURON</p> <p>Front Engine Bushing (FR,M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09E92FMZ</p> <p>21910-28000</p> <p>ELANTRA'92,94 SCOUPE</p> <p>Insulator Engine (FR,M/T)</p> <p>Under Develop</p>


<p>H09E92EA</p> <p>21931-28500</p> <p>ELANTRA'92 (1.8)</p> <p>Front Engine Bushing (RE,A/T)</p> <p>B : 4 / C : 48 pcs.</p>		<p>H09E92EAZ</p> <p>21930-28801</p> <p>ELANTRA'92 (1.8)</p> <p>Insulator Engine (RE,A/T)</p> <p>Under Develop</p>
<p>H09E92EM</p> <p>21931-29000</p> <p>ELANTRA'92,96 TIBURON</p> <p>Front Engine Bushing (RE,M/T)</p> <p>B : 4 / C : 48 pcs.</p>		<p>H09E96EMZ</p> <p>21930-29001</p> <p>ELANTRA '96</p> <p>Insulator Engine (RE,M/T)</p> <p>Under Develop</p>
<p>H09E92EM</p> <p>21931-29000</p> <p>ELANTRA'92,96 TIBURON</p> <p>Front Engine Bushing (RE,M/T)</p> <p>B : 4 / C : 48 pcs.</p>		<p>H09E94EMZ</p> <p>21930-28001</p> <p>ELANTRA'92,96 1.6,1.8</p> <p>Insulator Engine (RE,M/T)</p> <p>Under Develop</p>
<p>H09E92FA</p> <p>21910-28500</p> <p>ELANTRA'92,94 SCOUPE</p> <p>Front Engine Bushing (FR,A/T)</p> <p>B : 4 / C : 48 pcs.</p>		<p>H09E92FAZ</p> <p>21910-28500</p> <p>ELANTRA'92,94 SCOUPE</p> <p>Insulator Engine (FR,A/T)</p> <p>Under Develop</p>
<p>H09E92L0</p> <p>21812-28200</p> <p>ELANTRA 92,94 1.6,1.8</p> <p>Front Engine Bushing (LH)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H09E94LAZ</p> <p>21810-28260</p> <p>ELANTRA'96 1.6,1.8</p> <p>Insulator Engine (LH,A/T)</p> <p>Under Develop</p>
<p>H09E92L0</p> <p>21812-28200</p> <p>ELANTRA 92,94 1.6,1.8</p> <p>Front Engine Bushing (LH)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H09E92LAZ</p> <p>21810-28800</p> <p>ELANTRA'92 1.8</p> <p>Insulator Engine (LH,A/T)</p> <p>Under Develop</p>
<p>H09E94FA</p> <p>21641-33410</p> <p>ELANTRA 92,94,1.8</p> <p>Front Engine Bushing (FR)</p> <p>B : 4 / C : 48 pcs.</p>		

<p>H09E9600</p> <p>21812-29150</p> <p>ELANTRA'92,96,TIBURON</p> <p>Front Engine Bushing</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H09E960RZ</p> <p>21810-29150</p> <p>ELANTRA'92,96,TIBURON</p> <p>Insulator Engine (RH)</p> <p>Under Develop</p>
<p>H09E9600</p> <p>21812-29150</p> <p>ELANTRA'92,96,TIBURON</p> <p>Front Engine Bushing</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H09E92LAZ</p> <p>21810-28200</p> <p>ELANTRA'92 1.6</p> <p>Insulator Engine (LH,A/T)</p> <p>Under Develop</p>
<p>H09S92EA</p> <p>21631-33410</p> <p>SONATA'92</p> <p>Front Engine Bushing (RE,A/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09S92EAZ</p> <p>21630-33410</p> <p>SONATA'92</p> <p>Insulator Engine</p> <p>Under Develop</p>
<p>H09S92EM</p> <p>21631-36000</p> <p>SONATA 92</p> <p>Front Engine Bushing (RE,M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09S92EMZ</p> <p>21630-33010</p> <p>SONATA 92</p> <p>Insulator Engine</p> <p>Under Develop</p>

<p>H09S94EA</p> <p>21931-34100</p> <p>SONATA'94</p> <p>Front Engine Bushing (RE,A/T)</p> <p>B : 4 / C : 48 pcs.</p>		<p>H09S94EAZ</p> <p>21930-34300</p> <p>SONATA'94</p> <p>Insulator Engine (RE,A/T)</p> <p>Under Develop</p>
<p>H09S94FA</p> <p>21911-34500</p> <p>SONATA' 94 FR,A/T</p> <p>Front Engine Bushing (FR,A/T)</p> <p>B : 4 / C : 48 pcs.</p>		<p>H09S94FAZ</p> <p>21910-34310</p> <p>SONATA' 94 FR,A/T</p> <p>Insulator Engine (FR,A/T)</p> <p>Under Develop</p>
<p>H09S94L0</p> <p>21852-33070</p> <p>SONATA'92,94</p> <p>Front Engine Bushing (LH)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H09S94L0Z</p> <p>21830-33470</p> <p>SONATA'92,94</p> <p>Insulator Engine (LH,A/T)</p> <p>Under Develop</p>
<p>H09S94L0</p> <p>21852-33070</p> <p>SONATA'92,94</p> <p>Front Engine Bushing (LH)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H09S94LZ</p> <p>21810-34000</p> <p>SONATA'92,94</p> <p>Insulator Engine (LH)</p> <p>Under Develop</p>
<p>H09S94L0</p> <p>21852-33070</p> <p>SONATA'92,94</p> <p>Front Engine Bushing (LH)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H09S94LMZ</p> <p>21830-33070</p> <p>SONATA'92,94</p> <p>Insulator Engine (LH,M/T)</p> <p>Under Develop</p>
<p>H09S94L1</p> <p>21812-34600</p> <p>SONATA 94 16V</p> <p>Front Engine Bushing (LH)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H09S94L1Z</p> <p>21810-34601</p> <p>SONATA 94 16V</p> <p>Insulator Engine</p> <p>Under Develop</p>

<p>H09S97EA</p> <p>21931-35500</p> <p>SONATA'97</p> <p>Front Engine Bushing (RE,A/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09S97EAZ</p> <p>21930-35500</p> <p>SONATA'97</p> <p>Insulator Engine (RE,A/T)</p> <p>Under Develop</p>
<p>H09S97EM</p> <p>21931-35000</p> <p>SONATA'97</p> <p>Front Engine Bushing (RE,M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09S97EMZ</p> <p>21930-35000</p> <p>SONATA'97</p> <p>Insulator Engine (FR,M/T)</p> <p>Under Develop</p>
<p>H09S97FA</p> <p>21911-34401</p> <p>SONATA' 97</p> <p>Front Engine Bushing (FR A/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09S97FAZ</p> <p>21910-34410,34411</p> <p>SONATA' 97</p> <p>Insulator Engine (FR,A/T)</p> <p>Under Develop</p>
<p>H09S97FM</p> <p>21911-35010</p> <p>SONATA' 97</p> <p>Front Engine Bushing (FR M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H09S97FMZ</p> <p>21910-34020</p> <p>SONATA' 97</p> <p>Insulator Engine (FR,M/T)</p> <p>Under Develop</p>
<p>H09S97L0</p> <p>21812-35140</p> <p>SONATA' 97</p> <p>Front Engine Bushing (LH,M/T,A/T)</p>  <p>B : 2 / C : 24 pcs.</p>	
<p>H09X00L0</p> <p>21818-24000, 21834-24700</p> <p>EXCEL,SCOPE</p> <p>Front Engine Bushing (LH)</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H09X00L0Z</p> <p>21810-24110</p> <p>EXCEL</p> <p>Insulator Engine (LH)</p> <p>Under Develop</p>
<p>H09X00L0</p> <p>21818-24000, 21834-24700</p> <p>EXCEL,SCOPE</p> <p>Front Engine Bushing (LH)</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H09C00L0Z</p> <p>21810-23630</p> <p>SCOPE</p> <p>Insulator Engine (LH)</p> <p>Under Develop</p>

<p>H09X92E0 21851-24000 EXCEL,SCOUBE Front Engine Bushing (RE,M/T) B : 4 / C : 48 pcs.</p> 	<p>H09X92E0Z 21930-34200 EXCEL Insulator Engine (RE,M/T) Under Develop</p>
<p>H09X92E0 21851-24000 EXCEL,SCOUBE Front Engine Bushing (RE,M/T) B : 4 / C : 48 pcs.</p> 	<p>H09X92EMZ 21850-24010 EXCEL Insulator Engine (RE,M/T) Under Develop</p>
<p>H09X92E0 21851-24000 EXCEL,SCOUBE Front Engine Bushing (RE,M/T) B : 4 / C : 48 pcs.</p> 	<p>H09C00EMZ 21850-23800 SCOUBE Insulator Engine (RE,M/T) Under Develop</p>
<p>H09X92FA 21840-24710 EXCEL Front Engine Bushing (FR,A/T) B : 4 / C : 48 pcs.</p> 	<p>H09X92FAZ 21840-24710 EXCEL Insulator Engine (FR,A/T) Under Develop</p>
<p>H09X92FM 21846-24000 EXCEL Front Engine Bushing (FR,M/T) B : 4 / C : 48 pcs.</p> 	<p>H09X92FMZ 21840-24010 EXCEL Insulator Engine (FR,M/T) Under Develop</p>
<p>H11A94R0 21834-22130 ACCENT Rear Engine Bushing (M/T,A/T) B : 2 / C : 24 pcs.</p> 	<p>H11A94RMZ 21830-22020 ACCENT Rear Engine Mounting(M/T) Under Develop</p>
<p>H11A94R0 21834-22130 ACCENT Rear Engine Bushing (M/T,A/T) B : 2 / C : 24 pcs.</p> 	<p>H11A94RAZ 21830-22400 ACCENT Rear Engine Mounting(A/T) Under Develop</p>

<p>H11E92E0</p> <p>21832-28700</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Bushing (RE)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H11E96EAZ</p> <p>21830-29150</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Mounting (RE)</p> <p>Under Develop</p>
<p>H11E92E0</p> <p>21832-28700</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Bushing (RE)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H11E94EAZ</p> <p>21830-28760</p> <p>ELANTRA' 94 1.6</p> <p>Rear Engine Mounting (RE,A/T)</p> <p>Under Develop</p>
<p>H11E92E0</p> <p>21832-28700</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Bushing (RE)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H11E94EAZ</p> <p>21830-28860</p> <p>ELANTRA' 94 1.8</p> <p>Rear Engine Mounting (RE,A/T)</p> <p>Under Develop</p>
<p>H11E92E0</p> <p>21832-28700</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Bushing (RE)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H11E92EAZ</p> <p>21830-28700</p> <p>ELANTRA' 94 1.6</p> <p>Rear Engine Mounting (RE,A/T)</p> <p>Under Develop</p>
<p>H11E92E0</p> <p>21832-28700</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Bushing (RE)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H11E92EZ</p> <p>21830-28800</p> <p>ELANTRA' 94 1.8</p> <p>Rear Engine Mounting (RE,A/T)</p> <p>Under Develop</p>
<p>H11E92EA</p> <p>21832-28200</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Bushing (RE)</p> <p>B : 2 / C : 24 pcs.</p>		<p>H11E96EAZ</p> <p>21830-29100</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Mounting (RE)</p> <p>Under Develop</p>
<p>H11E92EA</p> <p>21832-28200</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Bushing (RE)</p> <p>B : 2 / C : 24 pcs.</p>		
<p>H11E92EA</p> <p>21832-28200</p> <p>ELANTRA'92,94,96</p> <p>Rear Engine Bushing (RE)</p> <p>B : 2 / C : 24 pcs.</p>		

<p>H11S920A</p> <p>21872-33070</p> <p>SONATA'92 16V</p> <p>Rear Engine Bushing</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H11S920Z</p> <p>21860-33470</p> <p>SONATA'92 16V</p> <p>Rear Engine Mounting</p> <p>Under Develop</p>
<p>H11S920M</p> <p>21860-33070</p> <p>SONATA'92 16V M/T</p> <p>Rear Engine Bushing (M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H11S920M</p> <p>21860-33070</p> <p>SONATA'92 16V M/T</p> <p>Rear Engine Mounting (M/T)</p> <p>Under Develop</p>
<p>H11S94E0</p> <p>21832-34600</p> <p>SONATA' 94</p> <p>Rear Engine Bushing (A/T, M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H11S94E0Z</p> <p>21830-34600</p> <p>SONATA' 94</p> <p>Rear Engine Mounting(A/T, M/T)</p> <p>Under Develop</p>
<p>H11S94E0</p> <p>21832-34600</p> <p>SONATA' 94</p> <p>Rear Engine Bushing (A/T, M/T)</p>  <p>B : 4 / C : 48 pcs.</p>	<p>H11S94EMZ</p> <p>21830-34200</p> <p>SONATA' 94</p> <p>Rear Engine Mounting(M/T)</p> <p>Under Develop</p>
<p>H11X92EA</p> <p>21834-24800</p> <p>EXCEL, SCOUPE</p> <p>Rear Engine Bushing (A/T)</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H11X92EAZ</p> <p>21830-24810</p> <p>EXCEL</p> <p>Rear Engine Mounting(A/T)</p> <p>Under Develop</p>
<p>H11X92EA</p> <p>21834-24800</p> <p>EXCEL, SCOUPE</p> <p>Rear Engine Bushing (A/T)</p>  <p>B : 2 / C : 24 pcs.</p>	<p>H11C00EAZ</p> <p>21830-23510</p> <p>SCOUPE</p> <p>Rear Engine Mounting(A/T)</p> <p>Under Develop</p>
<p>H11X92EM</p> <p>21834-24000</p> <p>EXCEL, SCOUPE</p> <p>Rear Engine Bushing (M/T)</p>  <p>B : 2 / C : 24 pcs.</p>	

HYUNDAI

<p>H13A00F</p> <p>54610-22000</p> <p>ACCENT</p> <p>Shock Absorber Mounting (FR)</p> <p>B : 1 / C : 20 pcs.</p> 	<p>H13E92F</p> <p>54610-28000</p> <p>ELANTRA 92-94</p> <p>Shock Absorber Mounting (FR)</p> <p>B : 1 / C : 20 pcs.</p> 
<p>H13E96F0</p> <p>54610-29000</p> <p>ELANTRA'96</p> <p>Shock Absorber Mounting (FR)</p> <p>B : 1 / C : 20 pcs.</p> <p>NEW</p> 	
<p>H13S94F</p> <p>54610-34010</p> <p>SONATA' 94-97</p> <p>Shock Absorber Mounting (FR)</p> <p>B : 1 / C : 20 pcs.</p> 	<p>H13X92F</p> <p>54610-24001</p> <p>EXCEL, SCOUPE</p> <p>Shock Absorber Mounting (FR)</p> <p>B : 1 / C : 20 pcs.</p> 
<p>H13S92F</p> <p>54610-36002</p> <p>SONATA' 92</p> <p>Shock Absorber Mounting (FR)</p> <p>B : 1 / C : 20 pcs.</p> 	
<p>H13E96EL</p> <p>55310-29000</p> <p>ELANTRA' 96</p> <p>Shock Absorber Mounting (RE,LH)</p> <p>B : 1 / C : 20 pcs.</p> 	<p>H13E96ER</p> <p>55320-29000</p> <p>ELANTRA' 96</p> <p>Shock Absorber Mounting (RE,RH)</p> <p>B : 1 / C : 20 pcs.</p> 

<p>H21A00E</p> <p>55513-22010</p> <p>ACCENT</p> <p>Stabilizer Shaft Rubber (RE)</p>  <p>B : 20 / C : 480 pcs.</p>	<p>H21A00F</p> <p>54813-22200</p> <p>ACCENT</p> <p>Stabilizer Shaft Rubber (FR)</p>  <p>B : 20 / C : 480 pcs.</p>
<p>H21E92F</p> <p>54813-28001</p> <p>ELANTRA 92,94</p> <p>Stabilizer Shaft Rubber (FR)</p>  <p>B : 20 / C : 480 pcs.</p>	
<p>H21E96E</p> <p>55513-29100</p> <p>ELANTRA '96</p> <p>Stabilizer Shaft Rubber (RE)</p>  <p>B : 12 / C : 288 pcs.</p>	<p>H21E96F</p> <p>54813-29100</p> <p>ELANTRA 96</p> <p>Stabilizer Shaft Rubber (FR)</p>  <p>B : 10 / C : 240 pcs.</p>
<p>H21S92F</p> <p>54813-33022</p> <p>SONATA '92</p> <p>Stabilizer Shaft Rubber (FR)</p>  <p>B : 20 / C : 480 pcs.</p>	
<p>H21S94E</p> <p>55577-34000</p> <p>SONATA '94, 97</p> <p>Stabilizer Shaft Rubber (RE)</p>  <p>B : 20 / C : 480 pcs.</p>	<p>H21S94F</p> <p>54813-34000</p> <p>SONATA '94,97</p> <p>Stabilizer Shaft Rubber (FR)</p>  <p>B : 16 / C : 384 pcs.</p>
<p>H21X00F</p> <p>54813-24010</p> <p>EXCEL ,SCOUBE</p> <p>Stabilizer Shaft Rubber (FR)</p>  <p>B : 20 / C : 480 pcs.</p>	
<p>H23H100</p> <p>54751-4B002</p> <p>H100</p> <p>Strut Bar Rubber</p>  <p>B : 12 / C : 192 pcs.</p>	

<p>H24A00WS 54551-22000 ACCENT Lower Arm Bushing (SMALL)</p>		<p>B : 10 / C : 180 pcs.</p>			
<p>H24A0WL 54555-22102 ACCENT Lower Arm Bushing (LH)</p>		<p>B : 4 / C : 72 pcs.</p>	<p>H24A0WR 54556-22102 ACCENT Lower Arm Bushing (RH)</p>		<p>B : 4 / C : 72 pcs.</p>
<p>H24E92WS 54551-28000 ELANTRA 92,94 Lower Arm Bushing (SMALL)</p>		<p>B : 10 / C : 180 pcs.</p>			
<p>H24E92WL 54555-28001 ELANTRA 92 Lower Arm Bushing (BIG,LH)</p>		<p>B : 4 / C : 72 pcs.</p>	<p>H24E92WR 54556-28001 ELANTRA 92 Lower Arm Bushing (BIG,RH)</p>		<p>B : 4 / C : 72 pcs.</p>
<p>H24E94WL 54555-28071 ELANTRA ' 94 Lower Arm Bushing (BIG,LH)</p>		<p>B : 4 / C : 72 pcs.</p>	<p>H24E94WR 54556-28071 ELANTRA ' 94 Lower Arm Bushing (BIG,RH)</p>		<p>B : 4 / C : 72 pcs.</p>
<p>H24E95WL 54555-28070 ELANTRA ' 95 Lower Arm Bushing (BIG,LH)</p>		<p>B : 4 / C : 72 pcs.</p>	<p>H24E95WR 54556-28070 ELANTRA ' 95 Lower Arm Bushing (BIG,RH)</p>		<p>B : 4 / C : 72 pcs.</p>
<p>H24E96WB 54583-29000,54584-29000 ELANTRA ' 96 Lower Arm Bushing (BIG LH,RH)</p>		<p>B : 6 / C : 108 pcs.</p>	<p>H24E96WS 54551-29000 ELANTRA ' 96 Lower Arm Bushing (SMALL)</p>		<p>B : 8 / C : 144 pcs.</p>
<p>H24S92WS 54551-36000 SONATA ' 92 Lower Arm Bushing (SMALL)</p>		<p>B : 8 / C : 144 pcs.</p>			

HYUNDAI

<p>H24S94W0</p> <p>55116-37000</p> <p>SONATA' 94,97</p> <p>Lower Arm Bushing</p>  <p>B : 8 / C : 144 pcs.</p>	<p>H24S94WS</p> <p>54551-37000</p> <p>SONATA' 94, 97</p> <p>Lower Arm Bushing (SMALL)</p>  <p>B : 10 / C : 180 pcs.</p>
<p>H24S95WB</p> <p>54580, 54581-35000B</p> <p>SONATA' 95,97</p> <p>Lower Arm Bushing (BIG)</p>  <p>B : 6 / C : 108 pcs.</p>	<p>H24S95WS</p> <p>54580, 54581-35000S</p> <p>SONATA' 95,97</p> <p>Lower Arm Bushing (SMALL)</p>  <p>B : 10 / C : 180 pcs.</p>
<p>H24X92W</p> <p>54551-24001</p> <p>EXCEL,SCOUBE</p> <p>Lower Arm Bushing</p>  <p>B : 6 / C : 108 pcs.</p>	
<p>H24M00W</p> <p>54551-25000</p> <p>MATRIX</p> <p>Low Arm Bushing</p>  <p>B : 10 / C : 180 pcs.</p>	<p>H24M01W</p> <p>54584-17000</p> <p>MATRIX</p> <p>Low Arm Bushing</p>  <p>B : 4 / C : 72 pcs.</p>
<p>H24T00WS</p> <p>54551-3A000</p> <p>TRAJET</p> <p>Low Arm Bushing</p>  <p>B : 6 / C : 96 pcs.</p>	
<p>H25E9201</p> <p>54551-28310</p> <p>ELANTRA' 92,94</p> <p>Suspension Bush</p>  <p>B : 4 / C : 72 pcs.</p>	<p>H25S9401</p> <p>55543-37000</p> <p>SONATA' 94</p> <p>Suspension Bush</p>  <p>B : 4 / C : 72 pcs.</p>
<p>H25S9402</p> <p>55543-35000</p> <p>SONATA' 94,97</p> <p>Suspension Bush</p>  <p>B : 4 / C : 56 pcs.</p>	<p>H25A00E</p> <p>54555-25000</p> <p>ACCENT Y2K</p> <p>Suspension Bush</p>  <p>B : 6 / C : 108 pcs.</p>
<p>H25T00E</p> <p>54555-3A100</p> <p>TRAJET</p> <p>Suspension Bush</p>  <p>B : 4 / C : 72 pcs.</p>	

HYUNDAI

<p>H27E920F NEW</p> <p>54830-37020</p> <p>ELANTRA 92,94</p> <p>Link Assy (RE)</p>  <p>B : 2 / C : 108 pcs.</p>	
<p>H27E960F NEW</p> <p>54830-29500</p> <p>ELANTRA 96</p> <p>Link Assy (RE)</p>  <p>B : 2 / C : 90 pcs.</p>	<p>H27E960E NEW</p> <p>55530-29500</p> <p>ELANTRA 96</p> <p>Link Assy (RE)</p>  <p>B : 2 / C : 54 pcs.</p>
<p>H27S920F NEW</p> <p>54830-36101</p> <p>SONATA 92</p> <p>Link Assy (FR)</p>  <p>B : 2 / C : 90 pcs.</p>	
<p>H27S940F NEW</p> <p>54830-2D000</p> <p>SONATA 94</p> <p>Link Assy (FR)</p>  <p>B : 2 / C : 180 pcs.</p>	<p>H27S940E NEW</p> <p>55580-37030</p> <p>SONATA 94</p> <p>Link Assy (RE)</p>  <p>B : 2 / C : 90 pcs.</p>